

Step Three: Upgrade WIFI antenna

- 1 Get WIFI upgrade kit from merchants for free



- 2 Remove the V1SE adaptor



- 3** Remove the battery cover and unscrew four screws




- 4** Disassemble the shell and take out the main control board




5 Remove the screen from the main control board



6 Short circuit pins 1 and 2 of U14 (There are two versions, please refer to the correct diagram for short circuit according to the actual object in your hand)

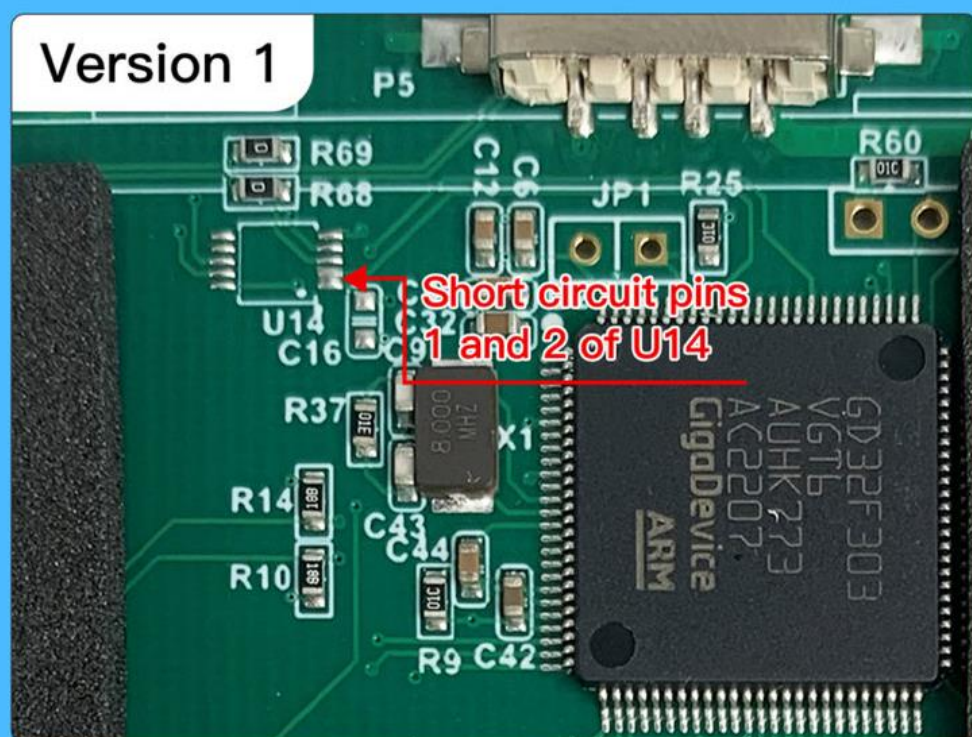


Version 2

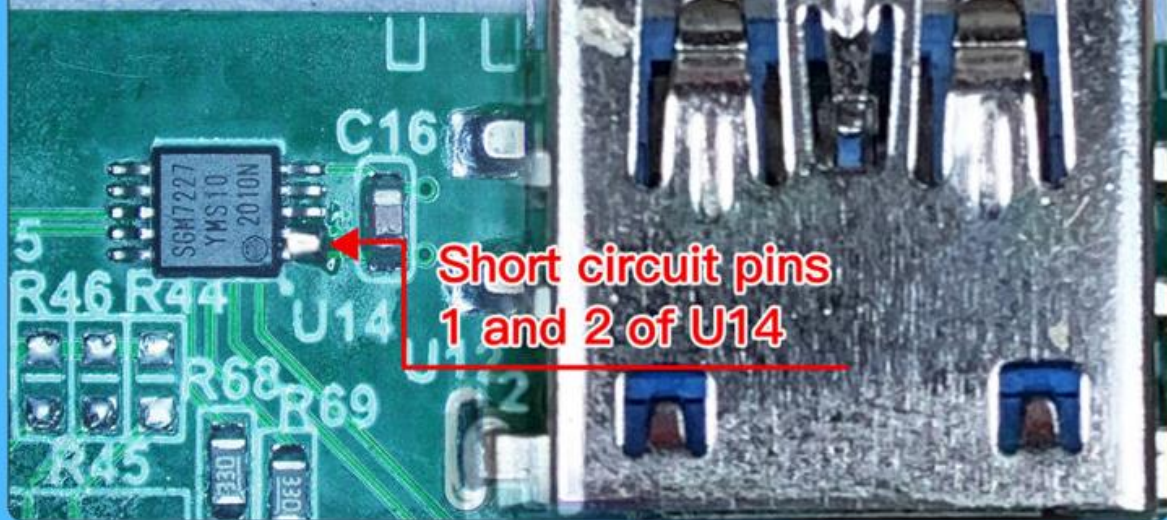

- 7 Cut the screen foam to the same level with the crystal oscillator



- 8 Stick the antenna adaptor to the following areas

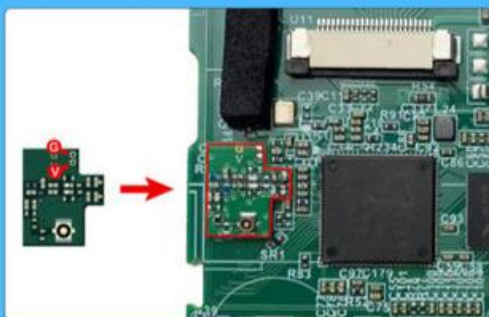

- 9.1: Wire jump point G on the antenna adaptor to point A
9.2: Wire jump point V on the antenna adaptor to point B
9.3: Wire jump point 1 on the antenna adaptor

Step Four: USB flash disk upgrade firmware

- 1 Open the official website: www.jcprogrammer.com and enter "Download Center", download "V1SE USB flash disk upgrade package" to the computer



- 2 Select the downloaded .rar file, right-click - unzip to the current file folder, copy the unzipped folder [V1SE_FW_V3.0] to the USB flash disk (note: to unzip the file, must select "unzip to the current folder" rather than "unzip to v1se_FW_V3.0")


9.3: Wire jump point 1 on the antenna adaptor to pins 3 and 4 of the chip

9.4: Wire jump point 2 on the antenna adaptor to pins 5 and 6 of the chip



(⚠ Here most users will jump wire by mistake, please note the corresponding position of chip pin)

There are two versions, please refer to the correct diagram for wire jump according to the actual object in your hand

Version 1

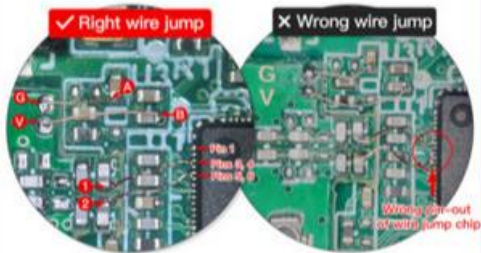

Version 2

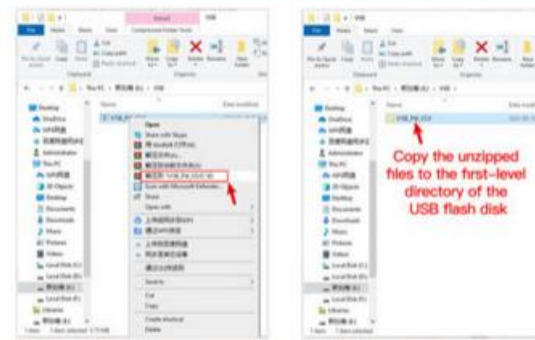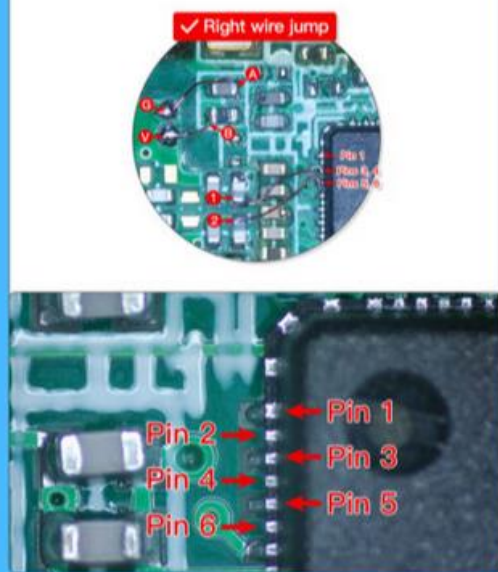

3 Connect the USB flash disk to the USB port of the V1SE, click "About" – "Firmware upgrade" – "upgrade"(Note: During upgrading, keep supplying power through USB data cable, do not cut off! Or the upgrade will fail and need to be mailed to the factory for upgrading)

(⚠ Important Note: Before upgrading, please connect V1SE to JCID Repair to upgrade to V7.6 or above, otherwise it will not be able to upgrade by USB flash disk)



- 10 Paste the FPC antenna on the upper right side of the shell



- 11 Fasten the FPC antenna terminal to the antenna base of the antenna adaptor



- 12 The antenna bypasses the left side of the screen base and is fixed as shown in the picture



- 13 When installing the motherboard, place the antenna direction directly above the back of the screen, and then fasten the rear cover



- 4 After upgrading, the system version is not lower than V7.6, the firmware version is not lower than V3.0, the hardware version is not lower than V1.0 and displays "The WIFI function has been upgraded, connect to the JCID platform to set WIFI password"



Step Five: Set WIFI password, start enjoying WIFI function

- 1 Connect V1SE to "JCID Repair", enter [Repair Fitting] interface, click "V1SE WIFI settings", select WIFI name, enter the WIFI password, click OK

